Haier

1.5 KG

Mini Washing Machine

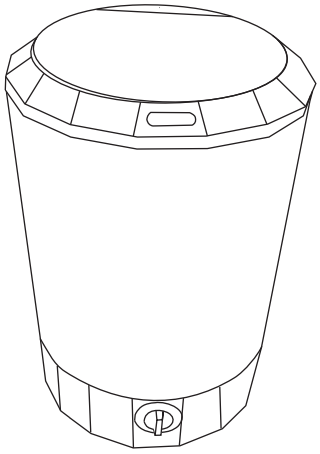

XPBM15-0501

Contents

Packing list.....the 2nd cover
Identifications of parts.....1
Safety precautions 2
Installation and adjustment 4
Preparation before washing 5
Washing capacity.....6
Detergent usage.....6
Washing Process 7
Disposal after washing 8
Trouble shooting 9
Specifications.....9

Packing list

Name	Quantity
● User's manual	● One
● Warranty manual	● One
● Water inlet hose 	● One
● Washing machine	● One

Identifications of parts

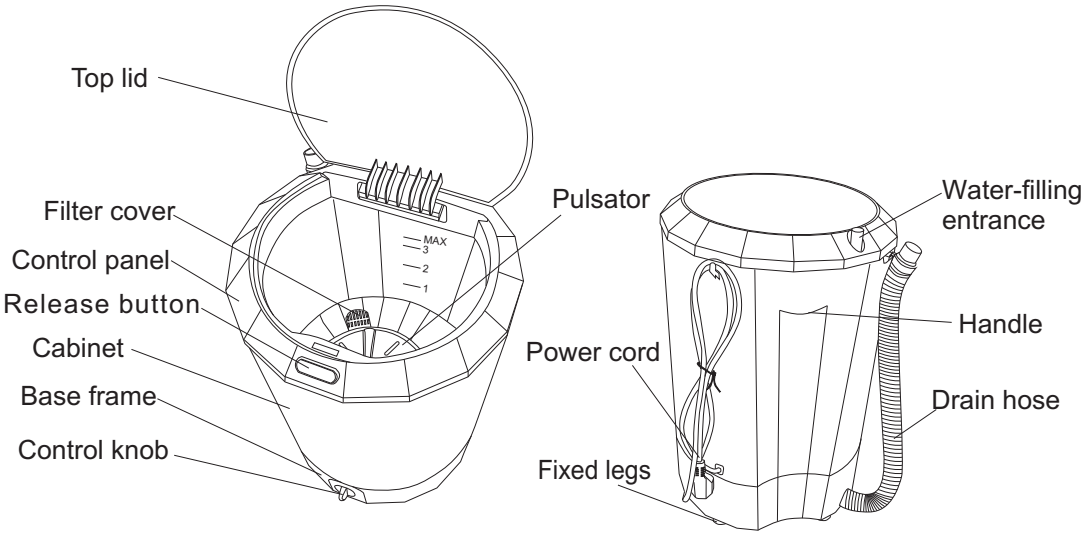

Description of the symbols

Warning sign	Contents marked with this symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the instructions, otherwise it may cause damage to the machine or endanger the personal safety of the user.
Forbidden sign	Contents marked with this symbol are actions forbidden to perform. Performing of those actions may result in destruction of the machine or permanent injury to the user.

Safety precautions

Please plug the washer into a 220V-240V a.c receptacle. Be sure to use single-phase three pin receptacle. Ensure the earthing prong of the power receptacle is earthed reliably. Use leakage protector if possible.

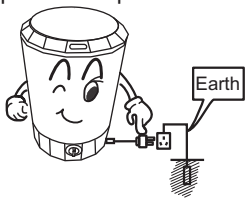

The appliance must be positioned so that the power plug is accessible.Be sure to pull the plug out and close the water faucets in the following cases: power failure, installing the machine,leaving the machine idle or cleaning the machine. Do not push or pull the power plug with wet hand.

If the appliance is attached to an extension cord or electrical portable outlet device,it should not be exposed to the splashing of water or ingress of moisture.

Do not twist pinch or damage the cord. If the cord or plug becomes damaged, please contact the service agent or an authorised technician.

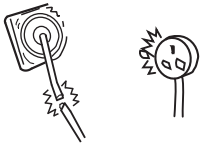

Do not put the machine in damp places like the bathroom. Never wash it with water. Do not put wet clothes on the control panel.

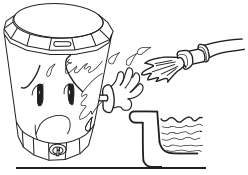

Do not use water hotter than 50°C .

If the washing machine is installed on carpet, do not block the ventilation hole with carpet.

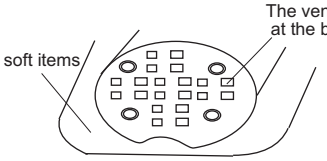

Do not wash water-proof items like the raincoat, bike covers etc.

Do not let the machine share one power point with other electric appliances. If the power plug is damaged or loose, do not use the plug any more.

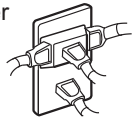

Safety precautions

Do not put your hands into the machine while it is in operation. It is dangerous even if the rotation is slow.
Take special care ofchildren. Do not let children climb on the washing machine.

Do not repair or alter the machine by yourself.

Do not put any hot or heavy items on the washing machine.

Do not wash clothes, with volatile materials (such as thinner, petrol etc.)

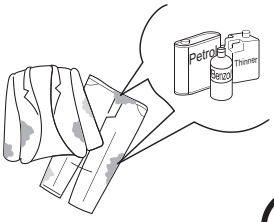

Do not allow children to use the washing machine.

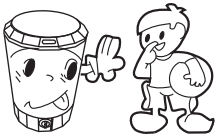

Keep the machine away from direct sunlight and heat sources.

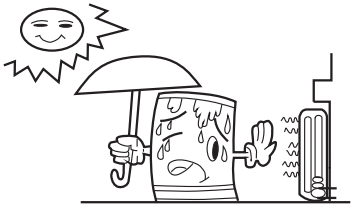

Installation and adjustment

Please install and adjust the machine according to the requirement of the manual.
It is very important for your safety and operation of the machine.

Usage of the drain hose

1.The height of the drain hose should be less than 10cm, otherwise drainage will not be smooth.

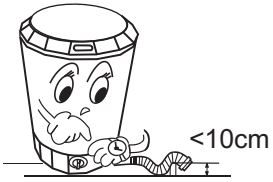

2.Do not trample or step on the drain hose.

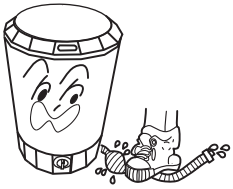

3. Do not lengthen or cut down the drain hose.

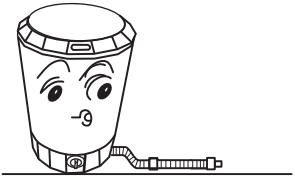

Adjust the installation position

The largest allowed angle of the machine is 2° .
More than this will result in unstable operation or stoppage of the machine.

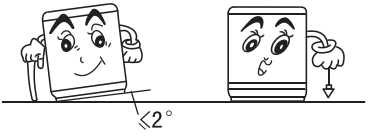

Preparation before washing

Pay attention to the following before washing.

Look for the care label on your laundry for special washing requirements	Make sure you have checked all pockets for any loose items.	Fasten all zippers, hooks,buttons and strings to make sure that these items don't snag on other clothes..	The quantity of clothes shall not exceed the rated value.For large clothes like jeans , they should be put in loosely.

a.Separate non-colorfast clothes from those that are.

b.For laundry that are water resistant, please push them into the water with your hands to soak.

c.For heavy soiled clothes,try to remove most of the loose soil before washing.

d.Do not put clothes polluted with chemicals directly into the washing machine.

e.Mend any torn garments or loose buttons as it may tear larger during washing.

Reference weight of the laundries:

● Pyjamas
（about 200g）

● shirt
（cotton, about 300g）

● underpants
（cotton, about 70g）

● undershirt
（cotton, about 180g）

● Socks
（blend, about 50g）

Washing Capacity

- The washing capacity of the machine refers to the maximum weight of dry clothes being washed at any one time.
  This capacity is 1.5kg.
- The thickness, size and type of the cloth will affect the actual washing capacity.

Detergent usage

Usage of whitener

- Fill water to the desired level. Dilute the whitener and pour it slowly into the washing tub.
- Avoid using whitener with colored or patterned laundries, as they are prone to lose color.
- The whitener should not go on the laundries directly.
- Refer to the user's manual for the usage and quantity of the whitener.
- For powder whitener, dissolve it before use.

Usage of washing powder

- Dissolving power in the machine
  1.Fill machine with water to level"1".Indicators can be seen on the inner tub.
  2.Add the powder. Run the machine for approx 30 seconds, to dissolve powder.
  3.Put the clothes in. Add water to a suitable water level.
- Soap flakes
  1.Prepare warm water of 30℃ in a container.
  2.Add the soap and then stir it until it`s fully dissolved.
- Put in the proper quantity of detergent according to the water level and the washing quantities .
- It is suggested not to use high sudsing detergent.

Washing Process

1. Connect the water hose provided to the water mains

Install the water inlet hose

Insert the water inlet hose into the water-filling entrance on the control panel.

NOTE

1.Confirm that the drain hose is properly stowed before filling with water, or the water will flow through the drain hose.

2.Inside the machine you will see water filling levels-"1", "2", "3"and"MAX". This relates to the amount of washing you are using.Never exceed the "MAX"Mark!

3.Only use the new hose set provided.

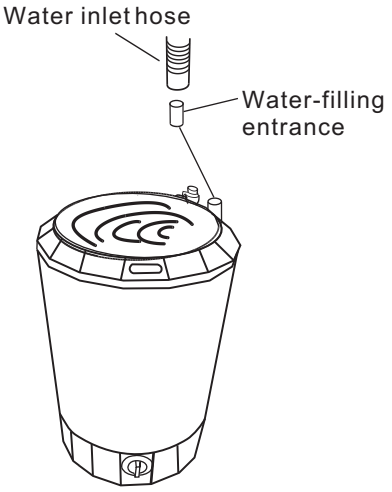

2.Connect the power

Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle.

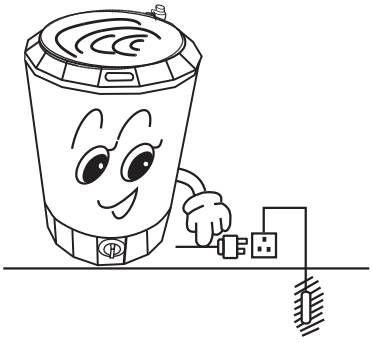

3. Fill the machine enough with water to mix detergent, put in your laundry and fill up water to the desired level.

4. Close the lid.

5.Washing duration reference

Select washing duration depending on the laundry

Laundry	Washing Duration(min)
Silk fabric(thin laundry)	About2~4
Knitted fabric/man-made fabric	About3~6
Bed sheet	About7~8
Cotton, blending or linen fabrics	About8~10
Very dirty or heavy laundry	About10~15

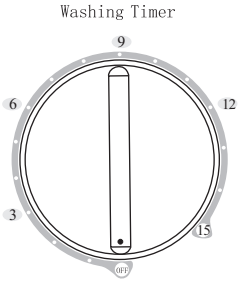

If you intend to set the timer at 2 minutes or less,you will need to turn it over 6 minutes then turn back.

6.Finish washing

- The tumbler will stop revolving.Level the draining hose down to let the waste water out.

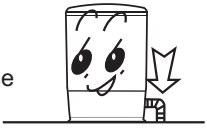

Disposal after washing

- After washing, close the water faucet. (If needed, you can dismantle the water inlet hose).
- Do not store water in the washing machine for a long period. Drain the water completely after each using.
- Be sure to pull off the power plug before maintenance.
- Hang up the power cord and drain hose.
- Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time (about 1 hour), then close the top lid.

If the cabinet is dirty, wipe it with wet cloth

- Do not flush it directly with water.
- Wipe it with neutral detergent.
- Do not wipe it with thinner, petrol, alcohol etc.

Trouble shooting

If you experience problems with your appliance,please pull out the power plug before checking anything.The following table may help in troubleshooting.If there is still a problem,return the unit to your supplier for help.

Phenomena	How to settle
The machine does not operate	● Is there power failure? —— Use it when the power is on. ● Is the power plug loose? — Insert the power plug tightly.
There's abnormal sound inside the machine	● Is the machine slanting?——Level the machine properly. ● Is there some foreign objects in a tub? —— Remove the metal foreign bodies

Specifications

Water level/ Water quantity (L)	3/17 2/12 1/7
Water inlet pressure（MPa）	0.02～0.2
Rated washing capacity (kg)	1.5